



USB-Connection

Generates PDF

Online configurator

More information at
www.ebi300.com

EBI 300 Temperature Data Logger

TRANSPORT | STORAGE

-ebro-
a xylem brand



Cold Chain Monitoring with the E




Print directly



Mail to receiver



PDF creation

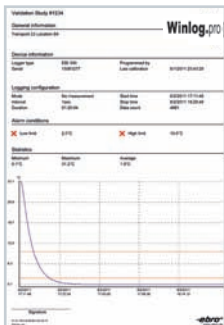

EBI 300 USB Data Logger

Easy Temperature Monitoring for Transport and Storage Applications

Start

Program, set optional limits, and press start...the EBI 300 is ready to monitor time and temperature. Once you remove your goods from storage or they reach their destination, you can see immediately if a temperature limit was exceeded with the help of a flashing red LED.

Connect

Connect the logger to any PC after transport or removing the monitored goods from storage. The logger will automatically generate a standard PDF without any additional software.

Inspect

Inspect time and temperature data for over limit conditions using any PDF reader software. The PDF can be stored, printed or emailed to any place you need. Custom data views can be created and calibration can be done using ebro's software Winlog.pro, Winlog.light or Winlog.basic.

Benefits

- Access the data anywhere with the automatically generated PDF report and any PDF software
- Minimize training, user errors and IT costs using EBI 300's simple, easy to use design and standard software
- Ensure data integrity since no data manipulation is possible
- EN 12830, ATO, VO (EG) 37/2005 compliant
- Factory calibration certificate included

More information at: www.ebi300.com

Technical Data

Typ	EBI 300
Measuring range	-30 °C...+60 °C
Accuracy	±0.5 °C (-20 °C...+40 °C) ±0.8 °C elsewhere
Resolution	0.1 °C
Sensor	NTC
Memory	40,000 values
Battery life time	up to two years (application dependent /user replaceable)
Measurement Samples	1 minute to 24 hours
Maximum Start Delay	72 h
Material	Polycarbonate
Display	Value, MIN / MAX
Measuring modes	Start/Stop, endless loop, start with button push
Alarms	High and low limits
Weight	35 g (with battery)
Protection class	IP 65
Programming software	Winlog.basic, Winlog.light and Winlog.pro



- For temperature monitoring related to HACCP / IFS issues or other perishable goods
- Transportation of fresh, cool and deep cool products
- Monitoring of fridges and deep freezers
- Programmable via the online configurator at www.ebi300.com



EBI 300
shown here with
optional wall mount

EBI 300
shown here with
optional external probe

Fax Order

at: +49 (0) 841 9 54 78-80

ebro® Electronic GmbH

Peringerstraße 10

D-85055 Ingolstadt

Internet: www.ebro.com

E-Mail: ebro@xyleminc.com

Tel. +49 (0) 8419 54 78-0

Fax +49 (0) 8419 54 78-80

Quantity	Description	Type	Part No
	Temperature Data Logger	EBI 300	1340-6330
	External Probe for EBI 300	TPC 300	1341-6331
	Wall Mount for EBI 300	EBI 300 WM	1340-6340

Ordering Data:

Company:

Zip code, City:

Name of person ordering / Dept.:

Phone:

Street:

Telefax:

Product Information - Please send us further information about:

Catalog "Instruments for Food Technology"

Date:

Signature:

-ebro-
a xylem brand